


STATIONARY BACKSTROKE START WEDGE

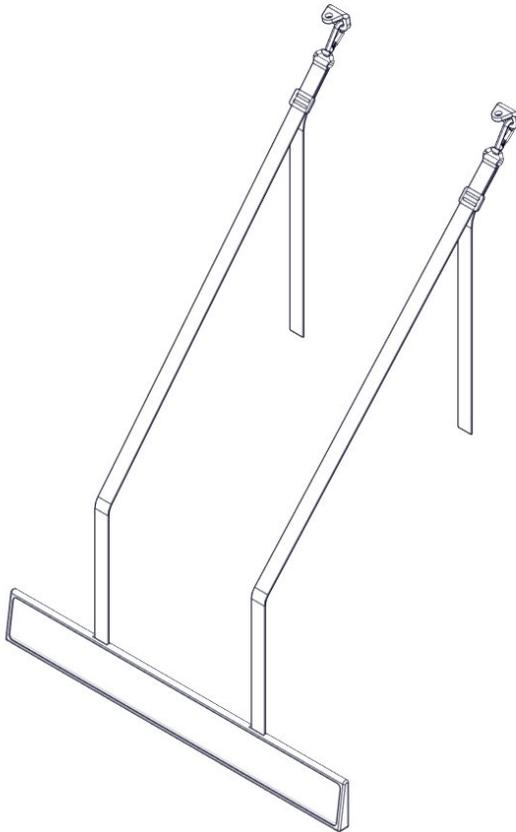

7100 Spectrum Lane | Missoula, MT 59808 | 1.406.542.9781 | www.spectrumproducts.com


You have purchased a Spectrum Aquatics Stationary Backstroke Start Wedge. Providing the unit is installed correctly and properly maintained, it will furnish you with many years of trouble free use. It is important to read this entire manual prior to beginning installation or operation.

Shipping Information:

Each unit will arrive fully assembled as ordered in one box. Before accepting the package from the carrier, inspect for visible damage. Spectrum Aquatics is not responsible for lost or damaged freight.

Information in this manual is subject to change without notice. Pictures and illustrations may not accurately depict your version. Please check our website for the most current information; our user manuals are available online in the customer service section of our website.


Components and Hardware:

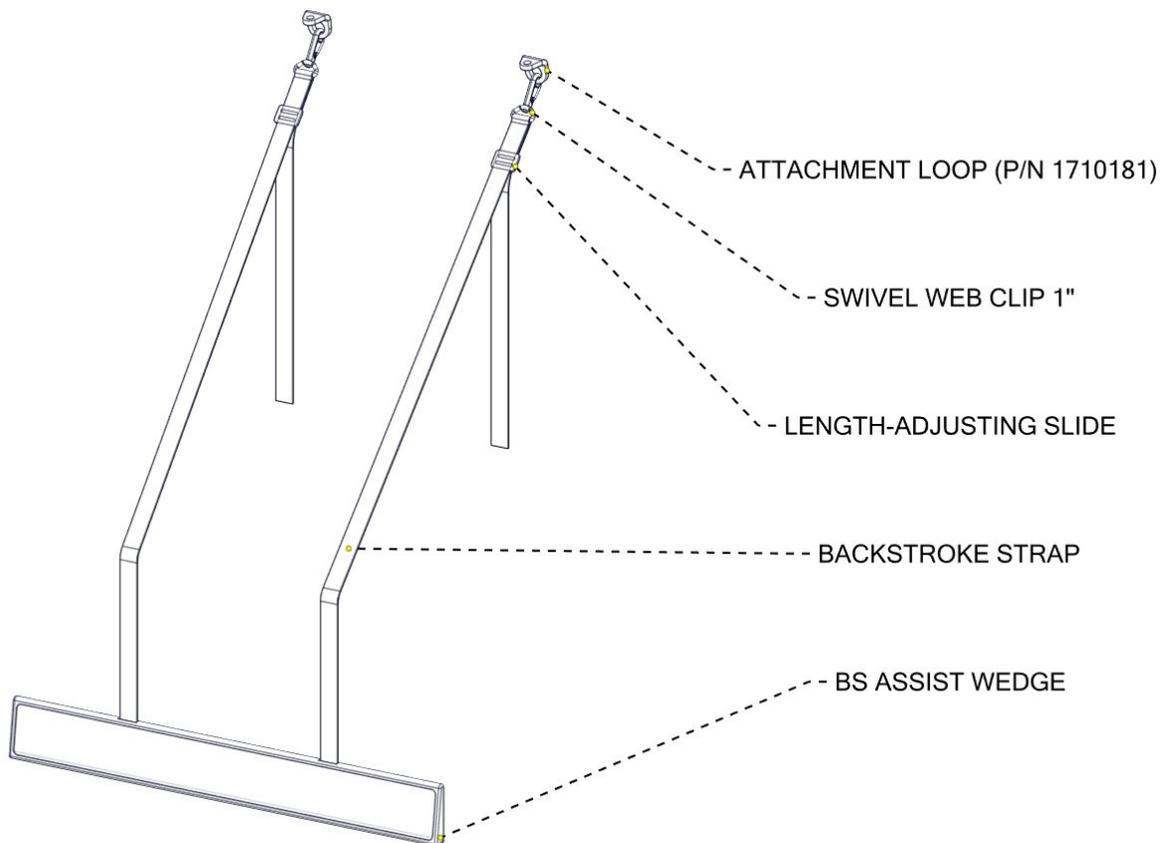


Installation Overview: Attachment Loops

NOTE: The Spectrum Aquatics Stationary Backstroke Start Wedge is compatible with nearly all starting blocks and existing hardware. If the attachment loops cannot be connected properly, please contact Spectrum for a custom solution or additional hardware. Please check manufacturer's warranty before proceeding with installation of the product.


1. Remove the rear set of hardware that secures the starting platform to the frame.

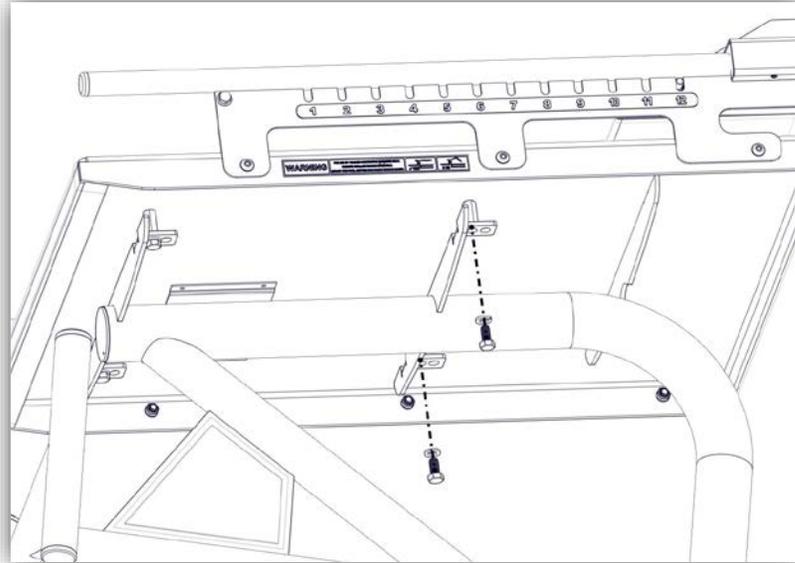


2. Place attachment loops on underside of weldment on the starting platform frame as shown. This step may vary based on the starting platform used for installation.

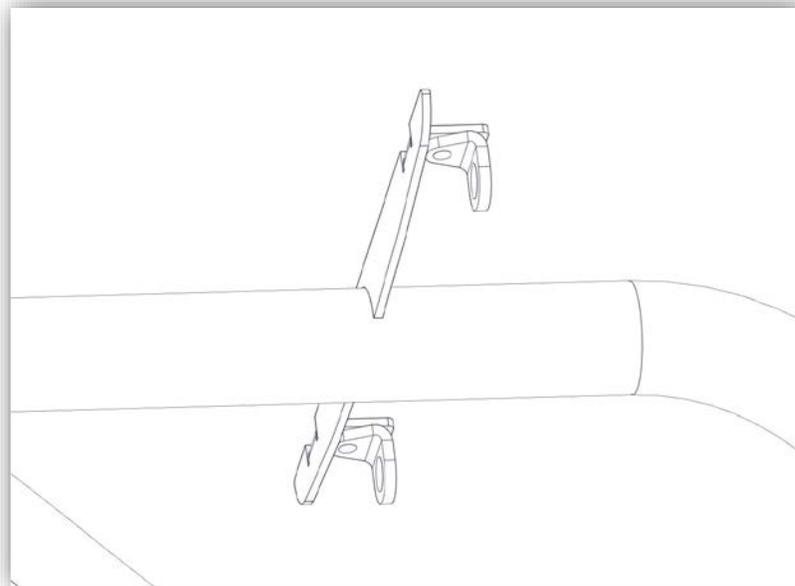

3. Replace hardware and starting platform top (with attachment loops in place). Tighten to ensure stability.

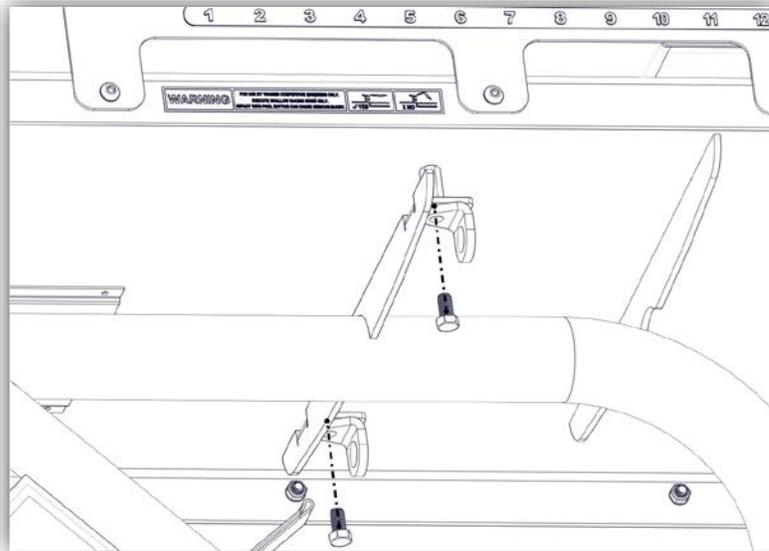

4. Attach the Stationary Backstroke Start Wedge by snapping the swivel web clips to the attachment loops on the underside of the Starting Platform Top.

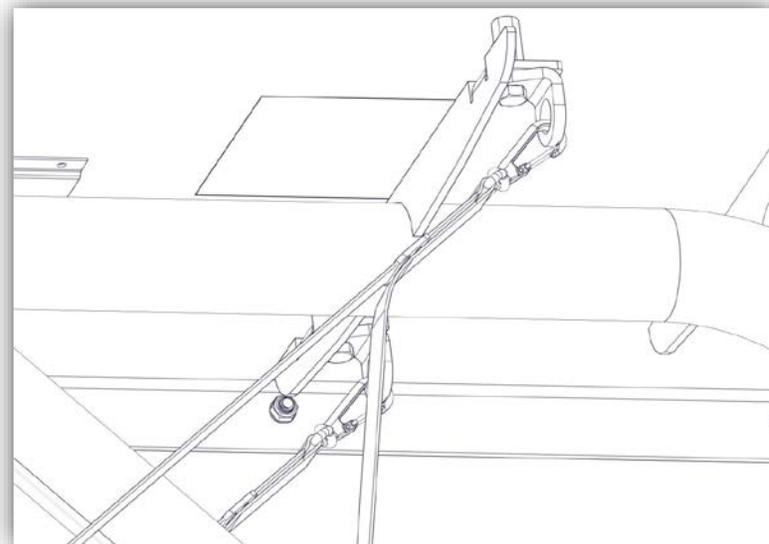

5. Repeat with any addition blocks and Stationary Backstroke Starting Wedges. Additional attachment loops (P/N 1710181) can be purchased so that the Stationary Backstroke Start Wedges can be used in several different locations with ease.

Operator's Guide

NOTE: The Stationary Backstroke Start Wedge should always be used in a manner consistent with the regulations set forth by the governing organization for the event.

1. Attach the Stationary Backstroke Start Wedge to attachment loops on the underside of starting platform top using the swivel web clips, as shown above.
2. Place the Stationary Backstroke Start Wedge in the water. Adjust the wedge to a proper height on the pool wall using the length adjusting slides.
3. Place feet on non-slip wedge and perform backstroke starts.
4. Remove Stationary Backstroke Start Wedge by detaching swivel web clips.

Care and Maintenance

The following should be performed periodically to ensure durability of the Stationary Backstroke Start Wedge.

- Before storing for extended periods:
 - Remove unit from installed location
 - Rinse entire unit in **fresh** (not pool) water.
 - Allow unit to dry completely while lying on a flat surface.
 - Store in a clean, dry place.
- Wedge and straps may be cleaned with **fresh** (not pool) water and a mild detergent.
- Inspect unit for damage or loosening connections before each use and before long-term storage.